



Quadrol 90x

Low-voltage electrical mobile stations for semi-automatic controlled tube rolling expansion



What's new in x version



Electromagnetic compatibility

Thanks to **galvanically isolated external commands** (rolling motor and pedal switch), the **x** version meets the common regulatory standards for electromagnetic compatibility and ensuring the **proper use of the equipment in confined spaces and inside or in the presence of large metal.**



Self zero setting

Reset the amps drawn from the idle rolling motor showing the operator on the display the "real zero." Free so the operator from controlling the offset to the beginning of each job ensuring repeatability from the first flaring.



Anti-friction tube expander controlled release

Program the reverse rotation time to rolling during the tube expnder release. It reduces abrasion of the mandrel and rolls ensuring a longer life to the tube expander.



Quadrol 90x

Low-voltage electrical mobile stations for semi-automatic controlled expansion of tubes whose diameter ranges between 3/8" and 2.1/2" (between 9,5 and 63,5 mm).

The process of tube expansion in tube sheets using the traditional tube expander must meet quality, productivity and repeatability requirements which are essential to successfully pass the strict pressure tightness tests the tube sheets undergo in the final testing stage.

To start and control the operation of the tube expander Maus Italia offers a range of fully motorised control systems and accessories, including three main families:

- Portrol (portable)
- Quadrol (semi-automatic)
- Automation (automatic)

Based on our experience we have selected the **control of the torque measured on the expander axis** as the most appropriate reference technology.

Unlike pure dimensional control, in fact, the torque control can make up for parameter variability (e.g. tolerances on sheet hole diameter and tube thickness), assuring reliability, repeatability and productivity to heat exchanger manufacturers.

Thanks to its fifty-year experience in the industry, Maus Italia, a company which always at the cutting edge of research, has designed and manufactured the new electrical stations for semi-automatic tube expansion *Quadrol 90x*, deriving from the *Quadrol* family, whose innovative solutions allow tube expansion on an industrial scale

Every component has been redesigned and upgraded, using the most modern and up-to-date technologies, and above all analysing the on-going feedback from our demanding customers; the result is a durable, heavy-duty product for heat exchanger manufacturing workshops.



Quadrol 90x standard

- Cheap
- Lightweight
- Easy to disassemble

Quadrol 90x plus

- Increased operating range on the X axis
- Continuous manual motion along the Y axis
- Reduction of the positioning time

Quadrol 90x

Mobile semi-automatic expansion stations accommodating and supporting the **MK low-voltage** 3-phase electrical rolling motors.

The Quadrol 90x stations include the following components:

- POVEX electronic expansion controller, the latest version of the successful F90 series, boasting thousands of pieces sold all over the
- MK series electrical rolling motor, strong and low-noise, featuring a self-ventilated, low-voltage three-phase motor, with automatic speed variation according to the torque, complete with a four-speed oil-bath gearbox featuring a suspension device mounted on a ball bushing;
- F308HS articulated telescopic shaft, deriving from the previous F308 series, with innovative design solutions making it reliable, particularly easy to handle as well as accurate and stable at high speeds; it expands the operating range along the X and Y axes and allows motion along the Z axis;
- F314HS and F317HS patented quick couplings, specifically designed to be to be used with the tube expander manufactured by Maus Italia to reduce the vibrations experienced by the operator, particularly when the rotation speed exceeds 400 rpm.
- PE900 pedal set
- The Porter series trolleys, four-wheeled and designed to support and displace the F901/5x electronic controller and the MK series rolling motor, dampen the reaction to the torque generated by the rolling motor, relieving the operator of this tiring function.

Their distinctive feature is the extruded aluminium modular structure, combining strength and low weight.

The Quadrol 90x station comes in 3 different versions, according to the Porter series trolley model:

- Quadrol 90x Same and with Porter Same and
- Quadrol 90x 回じる
- Quadrol 90x © © Tily with Porter © © Tily ©

with Porter DES

Quadrol 90x executive

Motor-driven

rolling motor

displacement

vertical

- Servo driven motion along the Y axis with increased productivity
- High reduction of the positioning time
- Cabinets for safe tools and accessories storage



The control board F90 1/5x

The new display interface has been redesigned to integrate all the commands in a display panel 7" optimizing the programming times by the operator.

Cycle mode

MAN manual cycle for individual rolling expansion

AUTO automatic cycle for rolling expansion in series

Phase Reversal

Rolling motor rotation reverse without changing the power supply wiring.

Self zero setting

Reset to zero the power consumption of the idle rolling motor showing to the operator on the display the "actual zero."

Can be automatic AD or manual MD.

Tube expander release time

Low reverse rotation time to release the tube expander once torque is achieved, allowing the friction reduction among mandrel, rolls and expanded tube.

Tube expander extraction time from the expanded tube

For a fast unlocking off the tube expander It phase and, after for speeding up its extraction out of the tube.

Pause time (tube change)

Pause time between a rolling expansion and the other, necessary for the operator to reposition the tube expander in the next tube.

Counter

Counting the rolling expansion completed with success.

Total counter

It counts the quantity of tube expansion during the entire life of the control unit. It is not resettable.

Rolling motor voltage

260 reduce considerably the minimum controllable torque value, increasing the sensitivity in low torque rolling expansion.

420 allows the rolling motor to achieve maximum torque for which has been designed

Tube rolling values

Rolling value sets by the operator to reach the calculated tube expansion diameter.

Power consumption of rolling motor

Actual power consumption of the idle rolling motor.






What's new in the MK rolling motors



Continuous speed variation

The increase of the working torque the rolling motor decreases the number of revolutions.

The variation of the number of revolutions according to the working torque of the tube expander, allows the motor to decrease the speed up to 60% avoiding overheating and the consequent deterioration of parts of the

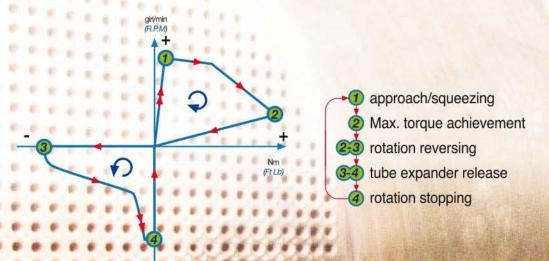

The operator can select the speed of rotation of the motor, thanks to the the MK series electrical rolling motor 4-speed mechanical gearbox which optimises the machining cycle (as shown in the table below), according to work parameters, such as:

- tube material
- tube diameter and thickness
- roller length
- mandrel model





		MIK 800				MK 400			
Mechanical gearbox		I ^a	Π^a	Ша	IV^a	I ^a	Π^a	$\mathrm{III}^{\mathrm{a}}$	IV ^a
Speed	giri/min (R.P.M)	200	300	540	800	110	170	300	450
Min. torque	Nm (Ft Lb)	0,30 (0.22)	0,25 (0.18)	0,20 (0.15)	0,15 (0.11)	0,50 (0.37)	0,40 (0.30)	0,30 (0.22)	0,20 (0.15)
Max. torque	Nm (Ft Lb)	55,00 (40.57)	36,00 (26.55)	20,00 (14.75)	14,00 (10.33)	165,00 (121.70)	114,00 (84.08)	64,00 (47.20)	44,00 (32.45)
Min tube Ø	mm (inches)	25,40 (1")	19,05 (3/4")	12,70 (1/2")	9,52 (3/8")	38,10 (1.1/2")	25,40 (1")	19,05 (3/4")	15,87 (5/8")
Max tube Ø	mm (inches)	38,10 (1.1/2")	31,75 (1.1/4")	22,22 (7/8")	19,05 (3/4")	63,50 (2.1/2")	38,10 (1.1/2")	31,75 (1.1/4")	25,40 (1")



F308 HS

Articulated telescopic shaft for mechanical motion transmission from MK series rolling motors to Maus Italia tube expanders

> It derives from the previous F308 series, with innovative design solutions making it reliable, particularly easy to handle as well as accurate and stable at high speeds

It expands the operating range along the X and Y axis and it complements motion along the Z axis; It allows to quickly connect the mandrel through the F314HS and F317HS couplings.

Special executions available upon request


> Technical specifications 0.0-14



Fields and work distance of the Quadrol 90x series stations.

After placing the Quadrol 90x standard mobile station about 1.2 metre away (as shown in the figure below), the operator will be able to easily insert the tube expander mandrel into all the holes arranged inside the coloured area, representing the field which can be reached from each individual position.

To complete the tube sheet the operator will have to move the station to new positions.

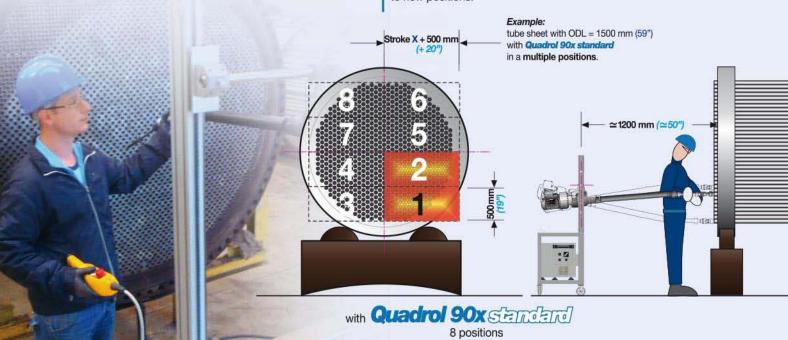



MAUS Quadrol 90x

F314HS **F317HS**



Joints with female female double quick couplings specific for high speeds

The latest joints with double quick coupling F314HS and F317HS, besides allowing to replace the tube expander extremely quickly, thanks to an accurate, patented design ensure that the input shaft F308HS is perfectly coaxial with the tube expander mandrel, on the output, reducing any vibration and allowing the operator to more easily insert the running mandrel into the tube.

> Caratteristiche tecniche QU-15




PE900

Digital input remote control pedal set

After placing the Quadrol 90x plus or Quadrol 90x executive mobile station about 1.2 metre away (as shown in the figure below), the operator will be able to easily insert the tube expander into all the holes arranged inside the coloured area, representing the field which can be reached from an individual position.

Area assuring maximum torque control accuracy and repeatability Area subject to minimal torque variations, proportional to the inclination

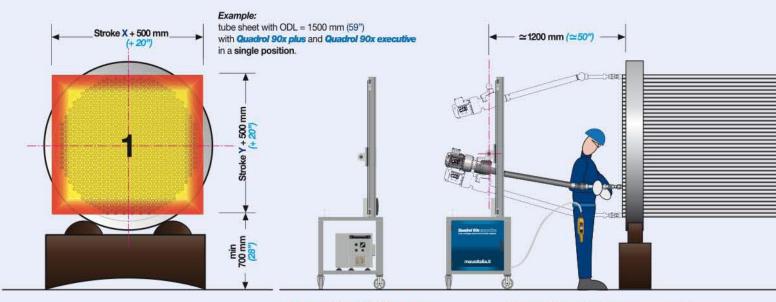


with Quadrol 90x EUS

1 single position with continuous manual motion

with Quadrol 90x executive

1 single position with servo driven remotely controlled motion

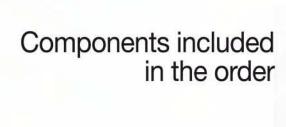

Quadrol 90x Same and

Trolley Controller Motor Telescopic shaft Couplings

Pedal set

Porter State F901/5x MK800 or M400 F308HS F314HS and F317HS



Quadrol 90xplus

Trolley Controller Motor Telescopic shaft

Porter DES F90 5x MK800 or MK400

F308HS F314HS and F317HS

Couplings

PE900

Pedal set



Quadrol 90x @@@@@

Trolley Controller Motor Telescopic shaft Couplings Pedal set

Porter executive MK800 or MK400


F314HS and F317HS PE900

> Photograph By the kind HEMACO

Technical specifications of the *Porter* trolleys and of the *F90* controller

Porter

Work axes			Porter standard	Porter plus	Porter executive
X axis		Motion	manual sliding	manual sliding	manual sliding
Y axis		Motion	fixed positions	servo manual	motor-driven
Working capac	ity				
Supported torque	after .	Nm (Ft Lb)	250 (184)	250 (184)	250 (184)
Supported weight		Kg (Lb)	150 (330)	150 (330)	150 (330)
Horizontal stroke	X	mm (inches)	600 (23)	1000 (39)	1000 (39)
Vertical stroke	Υ	mm (inches)	4 step 480 (19)	650 (25)	650 (25)
Dimensions					
Length (depth)	Α	mm (Ft)	500 (1.7)	700 (2.3)	700 (2.3)
Width	В	mm (Ft)	900 (3,0)	1400 (4.6)	1400 (4.6)
Height	C	mm (Ft)	1510 (5.0)	2030 (6.7)	2030 (6.70)
Weight		Kg (Lb)	40 (89)	81 (179)	113 (250)
Colours			Anodised aluminium	Anodised aluminium	Anodised aluminium

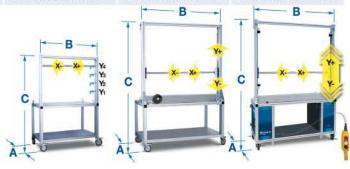

F901/5x


Supply			F90√5x
Voltage		V - Ph	230/400 - 3
Frequency		Hz	50/60
Installed power		KW	1,6
Motor voltage		V	26 / 42
Pedal set voltage		٧	24
Dimensions			
Length (depth)	Α	mm (Ft)	410 (1.35)
Width	В	mm (Ft)	760 (2.49)
Height	C	mm (Ft)	405 (1.33)
Weight		Kg (Lb)	65 (144)
Degree of protection		IP	54
Colours		RAL	7030 - 7035




Technical specifications of the MK motors and of the F308HS telescopic shaft

MK

Supply			MK800	MK400
Motor voltage		٧	26/42	26/42
Motor power		KW	0,8	1,5
Working capa	acity			
Speed		giri/min (R.P.M)	200-300-540-800	110-170-300-450
Max torque		Nm (Ft Lb)	55 (40.57)	165 (121.70)
Min tube Ø		mm (inches)	9,52 (3/8)	15,87 (5/8)
Max tube Ø		mm (inches)	38,10(1.1/2)	63,50 (2.1/2)
Recommended tel	escopic sh	naft Cod.	F308HS-2	F308HS-3
Recommended co	uplings	Cod.	F314HS	F317HS
Adapter		C.M.	3	3
Dimensions				
Gearbox Ø	Α	mm (Ft)	180,0 (0.59)	180,0 (0.59)
Width	В	mm (Ft)	608,5 (1.99)	608,5 (1.99)
Height	С	mm (Ft)	272,0 (0.89)	272,0 (0.89)
Weight		Kg (Lb)	30,0 (67)	31,0 (69)
Colours		IP	55	55
Colours		RAL	9005 - 7030	9005 - 7030

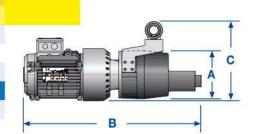

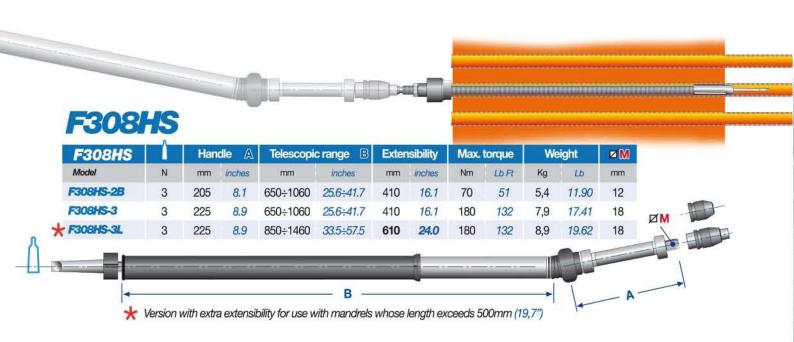

MAUS Quadrol 90x











MAUS ITALIA F. AGOSTINO & C. s.a.s. SS PAULLESE KM 30 26010 BAGNOLO CREMASCO (CR)





